



4K / UHD

Five-Input HDMI Switcher with Two HDBaseT Inputs and Mirrored HDMI / HDBaseT Outputs

Application Programming Interface
1.0.30

AT-UHD-SW-5000ED

Atlona Manuals
Switchers

Version Information

Version	Release Date	Notes
1	Dec 2020	Initial release

Commands

The following tables provide an alphabetical list of commands available for AT-UHD-SW-5000ED. Commands are case-sensitive. If the command fails or is entered incorrectly, then the feedback is “Command FAILED”. Commands can be sent using RS-232 or Telnet. There should be a 500 millisecond delay between each command sent to the unit. The default port for Telnet is 23.

 **IMPORTANT:** Each command is terminated with a carriage-return (0x0d) and the feedback is terminated with a carriage-return and line-feed (0x0a).

Command	Description
AudioOut	Enables or disables the audio on the AUDIO OUT port
AutoDispOff	Sends the power-off command to the display when a no source is detected
AutoDispOn	Sends the power-on command to the display when a source signal is received
AutoPwrMode	Sets the auto-power mode
AutoSW	Enable or disables auto switching or display auto switching status
Blink	Enables or disables blinking of the POWER button on the front panel
Broadcast	Enables or disables broadcast mode
ButtonPower	Assigns the specified transmission protocol to the POWER button
ButtonVol	Assigns the specified transmission protocol to the volume (UP / DOWN) buttons
CliIPAddr	Sets the IP address of the Telnet client
CliMode	Sets the login mode of the Telnet client
CliPass	Set the password for the Telnet client
CliPort	Sets the listening port of the Telnet client
CliUser	Sets the username for the Telnet client
CSpara	Sets the baud rate, data bits, parity bit, and stop bits for the serial port
CtlType	Sets the control protocol used to communicate with the display device
Display	Triggers the connected display on or off
DisWarmUp	Sets the display warm-up interval, in seconds
EDIDCopy	Saves the downstream EDID to the specified internal memory location on the unit
EDIDMSet	Assigns an EDID to the specified input
FeedbackSW	Enables or disables feedback verification
HDCPSet	Sets the HDCP reporting mode for the specified input
help	Displays the available list of commands
InputBroadcast	Enables or disables broadcast mode
IPAddUser	Adds a user for Telnet and web server login
IPCFG	Displays the current network settings for the AT-UHD-SW-5000ED
IPDelUser	Deletes the specified Telnet and web server user
IPDHCP	Enables or disables DHCP mode on the AT-UHD-SW-5000ED
IPLogin	Enables or disables login credentials when starting a Telnet session
IPPort	Sets the Telnet listening port for the AT-UHD-SW-5000ED
IPQuit	Closes the current Telnet session
IPStatic	Sets the static IP address, net mask, and gateway for the AT-UHD-SW-5000ED
IPTimeout	Specifies the time interval of inactivity before the Telnet session is closed
IROFF	Disables the IR receiver on the AT-UHD-SW-5000ED
IRON	Enables the IR receiver on the AT-UHD-SW-5000ED
LampCool	Sets the projector lamp cool-down time
Lock	Locks the buttons on the front panel
Mreset	Resets the AT-UHD-SW-5000ED to factory-default settings

Commands

Command	Description
PWLock	Locks the POWER button on the front panel
PWOFF	Execute this command to power-off the unit
PWON	Execute this command to power-on the unit
PwrKeyMode	Defines the function assigned to the POWER key
PWSTA	Displays the power state of the unit
REBOOT	Performs a soft boot of the AT-UHD-SW-5000ED
RepCmdTime	Sets the number of time a command will be sent
RepeatCmd	Enables or disables the RepCmdTime feature
RS232para	Sets the baud rate, data bits, stop bits, and parity for the HDBaseT zone
RS232zone	Send a command to the HDBT device
SetCmd	Assigns an RS-232 or IP command to the specified button on the front panel
SetEnd	Defines the end-of-line (EOL) termination character for the assigned command
Status	Displays which inputs are routed to the outputs
System	Displays the status of the AT-UHD-SW-5000ED
TrigCEC	Triggers the stored CEC command
TrigIP	Triggers the stored IP command
TrigRS	Triggers the stored RS-232 command
Type	Displays the model of the transmitter
Unlock	Unlocks the buttons on the front panel
Version	Displays the current firmware version of the AT-UHD-SW-5000ED
VOUT1	Increases / decreases the audio output volume
VOUTMute1	Mutes / unmutes the output audio
x1\$	Enables or disables output 1
x1AVx1	Routes the specified input to the HDMI output
x2\$	Enables or disables output 2

AudioOut

Enables or disables the audio on the **AUDIO OUT** port. Specify the sta argument to display the current setting.

Syntax
AudioOut X

Parameter	Description	Range
-----------	-------------	-------

X	State	on, off, sta
---	-------	--------------

Example

AudioOut on

Feedback

AudioOut on

AutoDispOff

Sends the power-off command to the display when a no source is detected. Specify the sta argument to display the current setting.

Syntax
AutoDispOff X

Parameter	Description	Range
-----------	-------------	-------

X	State	on, off, sta
---	-------	--------------

Example

AutoDispOff on

Feedback

AutoDispOff on

AutoDispOn

Sends a power-on command to the display when a source signal is received. Specify the sta argument to display the current setting.

Syntax
AutoDispOn X

Parameter	Description	Range
-----------	-------------	-------

X	State	on, off, sta
---	-------	--------------

Example

AutoDispOn on

Feedback

AutoDispOn on

AutoPwrMode

Sets the auto-power mode. Specify the sta argument to display the current setting.

Syntax
AutoPwrMode X

Parameter	Description	Range
X	Mode	DISPAVON, DISPAVSW, AVSW, sta

Example

AutoPwrMode DISPAVON

Feedback

AutoPwrMode DISPAVON

AutoSW

Enables or disables auto switching or display auto switching status. Specify the sta argument to display the current setting.

Syntax
AutoSW X

Parameter	Description	Range
X	Value	on, off, sta

Example

AutoSW on

Feedback

AutoSW on

Blink

Enables or disables blinking of the **POWER** button on the front panel. When set to on, the **POWER** button will flash, alternating between red and blue, and can be used to physically identify the unit on a network. The **POWER** button will flash until the Blink off command is executed. on = enables blinking; off = disables blinking; sta = displays the current setting. The default setting is off.

Syntax
Blink X

Parameter	Description	Range
X	Value	on, off, sta

Example

Blink on

Feedback

Blink on

Broadcast

Enables or disables broadcast mode. By default, broadcast mode is set to off. When set to on, changes in the web server will also be affected on the control system (if connected), via TCP/IP. To separate control between web server and Telnet, set this feature off. on = enables broadcast mode; off = disables broadcast mode; sta = displays the current setting.

Syntax

```
Broadcast X
```

Parameter	Description	Range
X	Value	on, off, sta

Example

Broadcast on

Feedback

Broadcast on

ButtonPower

Assigns the specified transmission protocol to the **POWER** button. If set to NONE, then the **POWER** button will power-on or power-off the AT-UHD-SW-5000ED. Specify the sta argument to display the current setting.

Syntax

```
ButtonPower X
```

Parameter	Description	Range
X	Protocol	NONE, CEC, RS-232, IP, sta

Example

ButtonPower CEC

Feedback

ButtonPower CEC

ButtonVol

Assigns the specified transmission protocol to the volume (UP / DOWN) buttons. If set to **AUD**, then the UP/DOWN buttons will control the output volume of the **AUDIO OUT** port. Specify the sta argument to display the current setting.

Syntax

```
ButtonVol X
```

Parameter	Description	Range
X	Protocol	AUD, RS-232, IP, sta

Example

ButtonVol IP

Feedback

ButtonVol IP

CliIPAddr

Sets the IP address of the controlled device. The IP address must be specified in dot-decimal notation. DHCP must be disabled before using this command. Specify the sta argument to display the current setting. Refer to the **IPDHCP** command for more information.

Syntax

```
CliIPAddr X
```

Parameter	Description	Range
X	IP address	0 ... 255 (per byte)

Example

```
CliIPAddr 192.168.1.61
```

Feedback

```
CliIPAddr 192.168.1.61
```

CliMode

Sets the login mode of the controlled device. login = requires login credentials, non-login = no login credentials required. Specify the sta argument to display the current setting.

Syntax

```
CliMode X
```

Parameter	Description	Range
X	Value	login, non-login, sta

Example

```
CliMode login
```

Feedback

```
CliMode login
```

CliPass

Sets the password for the controlled device. Execute the CliPass command without arguments to display the current password. The default password is Atlona.

Syntax

```
CliPass X
```

Parameter	Description	Range
X	Password	20 characters (max.)

Example

```
CliPass R3ind33r
```

Feedback

```
CliPass R3ind33r
```

CliPort

Sets the listening port for the controlled device. Use the sta argument to display the current listening port. The default port is 23. Use the sta argument to display the current setting.

Syntax

```
CliPort X
```

Parameter	Description	Range
X	Port	0 ... 65535, sta

Example

```
CliPort 50
```

Feedback

```
CliPort 50
```

CliUser

Sets the username for the controlled device. Execute the CliUser command without arguments to display the current username.

Syntax

```
CliUser X
```

Parameter	Description	Range
X	Username	20 characters (max.)

Example

```
CliUser BigBoss
```

Feedback

```
CliUser BigBoss
```

CSpara

Sets the baud rate, data bits, parity bit, and stop bits for the **RS-232** port. Use the sta argument to display the current serial port settings. Each argument must be separated by a comma; no spaces are permitted. Brackets must be used when executing this command.

Syntax

```
CSpara[W,X,Y,Z]
```

Parameter	Description	Range
W	Baud rate	2400, 4800, 9600, 19200, 38400, 57600, 115200
X	Data bits	7, 8
Y	Parity bit	None, Odd, Even
Z	Stop bits	1, 2

Example

```
CSpara[115200,8,0,1]
CSpara[sta]
```

Feedback

```
CSpara[115200,8,0,1]
CSpara [115200,8,0,1]
```

CtlType

Sets the control protocol used to communicate with the display device. Use the sta argument to display the current setting.

Syntax

```
CtlType X
```

Parameter	Description	Range
X	Value	rs-232, ip, cec, sta

Example

```
CtlType ip
```

Feedback

```
CtlType ip
```

Display

Triggers the connected display on or off. Specify the sta argument to display the current setting.

Syntax
Display X

Parameter	Description	Range
X	State	on, off, sta

Example
Display off

Feedback
Display off

DisWarmUp

Sets the display warm-up interval, in seconds. Specify the sta argument to display the current setting.

Syntax
DisWarmUp X

Parameter	Description	Range
X	Value	0 ... 300, sta

Example
DisWarmUp 120

Feedback
DisWarmUp 120

EDIDCopy

Saves the downstream EDID to the specified internal memory location on the unit. Do not use a space between the command and the first argument.

Syntax
EDIDCopyX Y

Parameter	Description	Range
X	Output	1 ... 2
Y	Memory location	1 ... 8

Example
EDIDCopy1 4

Feedback
EDIDCopy1 4

Commands

EDIDMSet

Assigns an EDID to the specified input. The EDID can be either one of the internal preprogrammed EDIDs or a custom EDID that can be stored in one of the eight memory locations. A brief description of each preprogrammed EDID is listed in the table below. For a detailed summary of each EDID, refer to the User Manual for more information. Use arguments 1 through 8 to store the EDID in any of eight memory locations. To display the EDID assigned to an input, use the sta argument.

Syntax

```
EDIDMSetX Y
```

Parameter	Description	Range
X	Input	1 ... 5
Y	EDID preset	1 ... 17
Z	Memory location	1 ... 8

Example

```
EDIDMSet2 3 1  
EDIDMSet1 sta
```

Feedback

```
EDIDMSet2 3 1  
EDIDMSet1 default
```

EDID (parameter Y)	Description	EDID (parameter Y)	Description
1	STD	10	ATL 1280x800 RGB 2CH
2	ATL 1080P 2CH	11	ATL 1366x768 RGB 2CH
3	ATL 1080P Multi CH	12	ATL 1080P DVI
4	ATL 1080P DD	13	ATL 1280x800 RGB DVI
5	ATL 1080P 3D 2CH	14	ATL 2160P 2CH
6	ATL 1080P 3D Multi CH	15	ATL 2160P Multi CH
7	ATL 1080P 3D DD	16	ATL 4K420 (4:2:0) 2CH
8	ATL 720P 2CH 2CH	17	ATL 4K420 (4:2:0) Multi CH
9	ATL 720P DD		

FeedbackSW

Enables or disables feedback verification. Specify the sta argument to display the current setting.

Syntax

```
FeedbackSW X
```

Parameter	Description	Range
X	State	on, off, sta

Example

```
FeedbackSW on
```

Feedback

```
FeedbackSW on
```

HDCPSet

Set the HDCP reporting mode of the specified port. Some computers will send HDCP content if an HDCP-compliant display is detected. on = reports to the source device that the display (sink) is HDCP-compliant, off = reports to the source device that the display (sink) is not HDCP-compliant (HDCP content will not be sent), auto = uses the attributes of the display device to accept or not accept HDCP content. Setting this value to off does *not* decrypt HDCP content. Use the sta argument to display the current setting.

Syntax

```
HDCPSet X Y
```

Parameter	Description	Range
X	Input	1 ... 5
Y	State	on, off, auto, sta

Example

```
HDCPSet 1 on
```

Feedback

```
HDCPSet 1 on
```

help

Displays the list of available commands. To obtain help on a specific command, enter the **help** command followed by the name of the command.

Syntax

```
help [X]
```

Parameter	Description	Range
X	Command name (optional)	Command

Example

```
help
```

Feedback

```
Command list
```

```
-----  
PWON  
PWOFF  
PWSTA
```

```
...  
...
```

InputBroadcast

Enables or disables broadcast mode. The default setting is off.

Syntax

```
InputBroadcast X
```

Parameter	Description	Range
X	State	on, off, sta

Example

```
InputBroadcast on
```

Feedback

```
InputBroadcast on
```

IPAddUser

Adds a user for web server login and Telnet sessions. This command performs the same function as adding a user within the web server. Refer to User Manual for more information.

Syntax

```
IPAddUser X Y
```

Parameter	Description	Range
X	User name	20 characters (max)
Y	Password	20 characters (max)

Example

```
IPAddUser BigBoss b055man
```

Feedback

```
IPAddUser BigBoss b055man
TCP/IP user was added
```

IPCFG

Displays the current network settings for the AT-UHD-SW-5000ED.

Syntax

```
IPCFG
```

This command does not require any parameters

Example

```
IPCFG
```

Feedback

```
IP Addr 192.168.11.176
Netmask 255.255.255.0
Gateway 192.168.11.1
IP Port 23
```

IPDelUser

Deletes the specified user. Deleted users will no longer be able to access the web server or initiate Telnet sessions. This command performs the same function as removing a user within the web server. Refer to the User Manual for more information.

Syntax

```
IPDelUser X
```

Parameter	Description	Range
X	User	User name

Example

IPDelUser Minion2

Feedback

IPDelUser Minion2
TCP/IP user was deleted

IPDHCP

Enables or disables DHCP mode on the AT-UHD-SW-5000ED. on = DHCP mode ON; off = DHCP mode OFF; sta = displays the current setting. If this feature is disabled, then a static IP address must be specified. The default setting is DHCP = ON.

Syntax

```
IPDHCP X
```

Parameter	Description	Range
X	Value	on, off, sta

Example

IPDHCP on

Feedback

IPDHCP on

IPLogin

Enables or disables the use of login credentials when initiating a Telnet session on the AT-UHD-SW-5000ED. If this feature is set to on, then the AT-UHD-SW-5000ED will prompt for both the username and password. Use the same credentials as the web server. on = login credentials required; off = no login required. Specify the sta argument to display the current setting. The default setting is on.

Syntax

```
IPLogin X
```

Parameter	Description	Range
X	Value	on, off, sta

Example

IPLogin off

Feedback

IPLogin off

IPPort

Sets the TCP/IP listening port for the AT-UHD-SW-5000ED.

Syntax
IPPort X

Parameter	Description	Range
X	Port	0 ... 65535, sta

Example

IPPort 230

Feedback

IPPort 230

IPQuit

Closes the current Telnet session.

Syntax
IPQuit

This command does not require any parameters

Example

IPQuit

Feedback

Connection lost...

IPStatic

Sets the static IP address, subnet mask, and gateway (router) address of the AT-UHD-SW-5000ED. Before using this command, DHCP must be disabled on the AT-UHD-SW-5000ED. Refer to the **IPDHCP** command for more information. Each argument must be entered in dot-decimal notation and separated by a space. The default static IP address of the AT-UHD-SW-5000ED is 192.168.1.254.

Syntax
IPStatic X Y Z

Parameter	Description	Range
X	IP address	0 ... 255 (per byte)
Y	Subnet mask	0 ... 255 (per byte)
Z	Gateway (router)	0 ... 255 (per byte)

Example

IPStatic 192.168.1.112 255.255.255.0 192.168.1.1

Feedback

IPStatic 192.168.1.112 255.255.255.0 192.168.1.1

IPTimeout

Specifies the time interval of inactivity before the TCP/IP session is terminated. When terminated, both the Telnet and web server session will be closed. The default setting is 300 seconds.

Syntax

```
IPTimeout X
```

Parameter	Description	Range
X	Interval (in seconds)	1 ... 60000

Example

```
IPTimeout 300
```

Feedback

```
IPTimeout 300
```

IROFF

Disables the IR receiver on the AT-UHD-SW-5000ED.

Syntax

```
IROFF
```

This command does not require any parameters

Example

```
IROFF
```

Feedback

```
IROFF
```

IRON

Enables the IR receiver on the AT-UHD-SW-5000ED.

Syntax

```
IRON
```

This command does not require any parameters

Example

```
IRON
```

Feedback

```
IRON
```

LampCool

Sets the projector lamp cool-down time. Match this setting with the lamp delay on the projector. Specify the `sta` argument to display the current setting.

Syntax

```
LampCool X
```

Parameter	Description	Range
X	Time interval (in seconds)	0 ... 300

Example

```
LampCool 120
```

Feedback

```
LampCool 120
```

Lock

Locks the buttons on the front panel. This feature is useful when the unit is installed in a rack environment or other remote location, to prevent accidental pressing of the front-panel buttons. Also refer to the [Unlock](#) command.

Syntax

```
Lock
```

This command does not require any parameters

Example

```
Lock
```

Feedback

```
Lock
```

Mreset

Resets the AT-UHD-SW-5000ED to factory-default settings.

Syntax

```
MReset
```

This command does not require any parameters

Example

```
Mreset
```

Feedback

```
Mreset
```

PWLock

Locks the **POWER** button on the front panel.

Syntax
PWLock

This command does not require any parameters

Example	Feedback
PWLock	PWLock

PWOFF

Executing this command will power-off the AT-UHD-SW-5000ED. Execute the PWON command to power-on the unit.

Syntax
PWOFF

This command does not require any parameters

Example	Feedback
PWOFF	PWOFF

PWON

Executing this command will power-on the AT-UHD-SW-5000ED. Execute the PWOFF command to power-off the unit.

Syntax
PWON

This command does not require any parameters

Example	Feedback
PWON	PWON

PwrKeyMode

Defines the function that is assigned to the **POWER** key. Specify the **sta** argument to display the current setting.

Syntax
PwrKeyMode

Parameter	Description	Range
X	Time interval (in seconds)	DISPAVON, DISPAVSW, AVSW, ALWAYSON

Example	Feedback
PwrKeyMode DISPAVSW	PwrKeyMode DISPAVSW

Setting	Description
DISPAVON	Display switches on/off, source audio/video signal always on.
DISPAVSW	Display switches on/off, source audio/video signal switches on/off.
AVSW	Display is always on, source audio/video signal switches on/off
ALWAYSON	Both source and display are always on.

PWSTA

Displays the current power state of the AT-UHD-SW-5000ED.

Syntax
PWSTA

This command does not require any parameters

Example	Feedback
PWSTA	PWON

REBOOT

Performs a soft reboot of the AT-UHD-SW-5000ED.

Syntax
REBOOT

This command does not require any parameters

Example	Feedback
REBOOT	REBOOT

RepCmdTime

Sets the number of time a command will be sent. Some devices may require that a command be sent multiple times before an acknowledge message is sent back to the AT-UHD-SW-5000ED. Specify the sta argument to display the current setting.

Syntax

```
RepCmdTime X
```

Parameter	Description	Range
X	Times to repeat command	2 ... 4, sta

Example

```
RepCmdTime 3
```

Feedback

```
RepCmdTime 3
```

RepeatCmd

Enables or disables the **RepCmdTime** feature. Specify the sta argument to display the current setting.

Syntax

```
RepeatCmd X
```

Parameter	Description	Range
X	Status	on, off, sta

Example

```
RepeatCmd on
```

Feedback

```
RepeatCmd on
```

RS232para

Sets the baud rate, data bits, parity bit, and stop bits for the desired **RS-232** port on the AT-UHD-SW-5000ED. There should be no space between the first parameter and the command. Add a space before the bracketed set of values. Each argument must be separated by a comma; no spaces are permitted. Brackets must be included when typing this command. Use the sta argument, *without brackets and including a space*, to display the current settings.

Syntax

```
RS232paraV [W,X,Y,Z]
```

Parameter	Description	Range
V	Input	1 ... 3
W	Baud rate	2400, 9600, 19200, 38400, 56000, 57600, 115200
X	Data bits	7, 8
Y	Parity bit	None, Odd, Even
Z	Stop bits	1, 2

Example

RS232para1 [115200,8,0,1]

RS232para1 sta

Feedback

RS232para1[115200,8,0,1]

RS232para1[115200,8,0,1]

RS232zone

Sends commands to the HDBaseT device. Refer to the User Manual of the display device for a list of available commands. Brackets must be used when specifying the command argument. The command line must not contain any spaces.

Syntax

```
RS232zoneX[Y]
```

Parameter	Description	Range
X	Zone	1 ... 3
Y	Command	String

Example

RS232zone1[command]

Feedback

RS232zone1[command]

SetCmd

Defines the command used by the AT-UHD-SW-5000ED, to perform the specified function on the display (sink) device. For example, to define the “power off” command, locate the equivalent “power off” command for the display by consulting the display’s User Manual. Once the desired command is located, assign it to the equivalent command used by the AT-UHD-SW-5000ED.

Syntax

```
SetCmd X[Y]
```

Parameter	Description	Range
X	Action	on, off, vol+, vol-, mute, fbkoff, fbkon, fbkmute
Y	Command	String

Example

SetCmd on CRLF

Feedback

SetCmd on CRLF [PWON]

SetEnd

Defines the end-of-line (EOL) termination character for the assigned command. Use this command in conjunction with the **SetCmd** command. The second parameter must be enclosed in parentheses. There is no space between the first and second argument.

Syntax

```
SetEnd X[Y]
```

Parameter	Description	Range
X	Command	on, off, vol+, vol-, mute, fbkoff, fbkon, fbkmute
Y	EOL character	None, CR, LF, CR-LF, Space, STX, ETX, Null

Example

SetEnd off[CR-LF]

Feedback

SetEnd off[CR-LF]

Status

Displays which inputs are routed to the outputs.

Syntax

```
Status
```

This command does not require any parameters

Example

Status

Feedback

x2AVx1

System

Displays the status of the AT-UHD-SW-5000ED. The sta argument must be specified.

Syntax
System X

Parameter	Description	Range
X	Request	sta

Example

System sta

Feedback

Model: AT-UHD-SW-5000ED
 MAC Addr: b8-98-b0-00-61-54
 Address Type: DHCP
 IP: 10.20.40.41
 Netmask: 255.255.255.0
 Gateway: 10.20.40.1
 HTTP Port: 80
 Telnet Port: 23
 Firmware: 1.0.30
 On/Up Time <dd HH:mm:ss>: 01 05:57:51
 Power Status: PWON
 Hostname: SW5000ED-006154

TrigCEC

Sends the specified command to the display using CEC. The output must always be specified and set to the value of 1. Do not add a space between the command and the first argument.

Syntax
TrigCECX Y

Parameter	Description	Range
X	Zone	1
Y	Command	on, off, vol+, vol-, mute

Example

TrigCEC1 on

Feedback

TrigCEC1 on

TrigIP

Sends the specified command to the display using IP. Do not add a space between the command and the first argument.

Syntax

```
TrigIPX Y
```

Parameter	Description	Range
X	TCP	1, 2
Y	Command	on, off, vol+, vol-, mute

Example

```
TrigIP1 on
```

Feedback

```
TrigIP1 on
```

TrigRS

Sends the specified command to the display using RS-232. The output must always be specified and set to the value of 1. Do not add a space between the command and the first argument.

Syntax

```
TrigRSX Y
```

Parameter	Description	Range
X	Zone	1
Y	Power state	on, off, vol+, vol-, mute

Example

```
TrigRS1 on
```

Feedback

```
TrigRS1 on
```

Type

Displays the SKU of the AT-UHD-SW-5000ED.

Syntax

```
Type
```

This command does not require any parameters

Example

```
Type
```

Feedback

```
AT-UHD-SW-5000ED
```

Unlock

Unlocks the buttons on the front panel. Also refer to the [Lock](#) command.

Syntax

```
Unlock
```

This command does not require any parameters

Example

```
Unlock
```

Feedback

```
Unlock
```

Version

Displays the current firmware version of the unit. Do not add a space between the X parameter and the command.

Syntax

```
VersionX
```

This command does not require any parameters

Example

```
Version
```

Feedback

```
1.2.45
```

VOUT1

Increases / decreases the audio output volume. In addition to specifying an integer value, the + and - arguments can be used, by themselves, to increase or decrease the volume by 1 value, respectively. To display the current value, specify the sta argument.

Syntax

```
VOUT1 X
```

Parameter	Description	Range
X	Level	+, -, -80 ... 15, sta

Example

```
VOUT 4
```

```
VOUT +
```

Feedback

```
VOUT 4
```

```
VOUT 5
```

VOUTMute1

Mutes / unmutes the audio. on = enables muting; off = disables muting; sta = displays the current setting.

Syntax

```
VOUTMute1 X
```

Parameter	Description	Range
X	State	on, off, sta

Example

VOUTMute1 on

Feedback

VOUTMute1 on

x1\$

Enables or disables output 1. Specify the sta argument to return the status of output 1.

Syntax

```
x1$ X
```

Parameter	Description	Range
X	Status	on, off, sta

Example

x1\$ off

Feedback

x1\$ off

x1AVx1

Routes the specified input to the specified output.

Syntax

```
xYAVxZ
```

Parameter	Description	Range
Y	Input	1 ... 5
Z	Output	1, 2

Example

x2AVx1

Feedback

x2AVx1

x2\$

Enables or disables output 2. Specify the sta argument to return the status of output 2.

Syntax**x2\$ X**

Parameter	Description	Range
X	Status	on, off, sta

Example

x2\$ on

Feedback

x2\$ on

