

Update Instructions

Updating the Firmware

Updating the firmware is performed using the built-in web server.


Requirements:

- AT-PRO5-MX810
- Firmware file
- Computer on the same network as the AT-PRO5-MX810



IMPORTANT: All AT-PRO5-101-RX and AT-PRO5-101-SC-RX receivers must be connected to the AT-PRO5-MX810 to receive firmware updates.

1. Download the firmware file from the **Firmware** tab on the [AT-PRO5-MX810](#) product page. Then, extract the contents of the .zip file to a folder on the computer's desktop.
2. Power on the unit and connect an Ethernet cable from the computer, containing the firmware, to the same network where the AT-PRO5-MX810 connected.
3. Login to the web server.
4. Click **Maintenance** in the side menu bar.
5. Click **System** in the top menu bar.

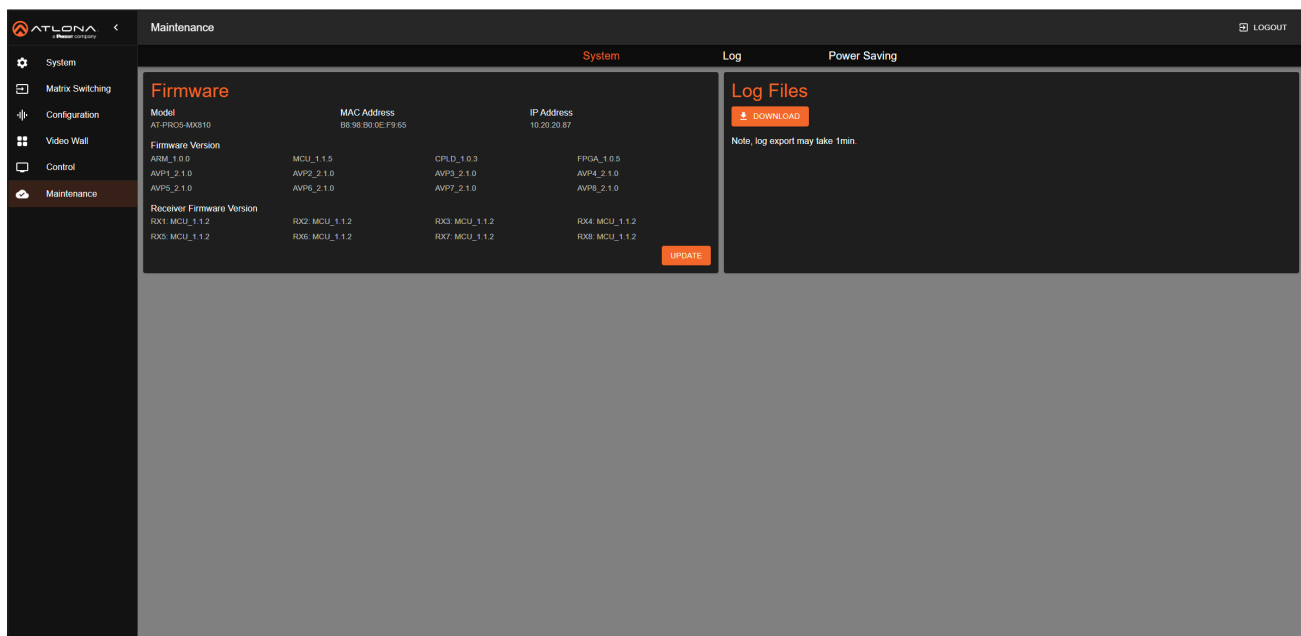

6. Under the **Firmware** window group, all firmware versions will be listed. If there are AT-PRO5-101-RX and/or AT-PRO5-101-SC-RX receivers connected to the AT-PRO5-MX810, then the receiver firmware version will also be listed.
7. Click the **UPDATE** button.
8. The Open dialog will be displayed. Locate the firmware file and click the Open button

Update Instructions

9. After the firmware is uploaded to the AT-PRO5-MX810, the following screen will be displayed. Note that other screens will be displayed during the firmware update process.



IMPORTANT: The firmware update process may take several minutes. Do not disconnect power from the AT-PRO5-MX810 during the update process.



Please do not power off the device during upgrade

0%

10. Once the update process is complete, the AT-PRO5-MX810 will automatically reboot and the **Login** screen will be displayed.