



4K/UHD HDMI Extender Kit with Ethernet, Control, and Bidirectional Remote Power

AT-AVA-EX100CE-BP-KIT



The Atlona AT-AVA-EX100CE-BP-KIT is an Avance™ Series HDBaseT transmitter and receiver set that supports Ethernet, control pass-through, and bidirectional remote power capabilities. The kit transmits 4K/UHD 60Hz 4:2:0 video up to 330 feet (100 meters). In addition to video with embedded multi-channel audio, 100Base-T Ethernet data, RS-232 and IR control signals, and remote powering by either the transmitter or the receiver are supported on the single CAT6A/7 cable. Integrated HDBaseT link status testing allows quick verification of cable, termination, and link quality. HDBaseT link status testing allows quick verification of cable, termination, and link quality. HDBaseT link status testing allows quick verification of cable, termination, and link quality. HDBaseT link status testing allows quick verification of cable, termination, and link quality. ARC is available on the HDMI connections to minimize cabling in audio return applications. Compact enclosures and included brackets allow the transmitter and receiver endpoints to be surface mounted in furniture or behind a display. The AT-AVA-EX100CE-BP-KIT delivers a cost-effective solution for extension of video, audio, Ethernet, control, and bidirectional power at resolutions up to 4K/UHD.

Package Contents

- | | |
|-----------------------------------|-------------------------|
| 1 x AT-AVA-EX100CE-BP-TX | 1 x IR emitter |
| 1 x AT-AVA-EX100CE-BP-RX | 4 x Mounting brackets |
| 1 x 2-pin captive screw connector | 8 x Mounting screws |
| 2 x 3-pin captive screw connector | 1 x 48V DC power supply |
| 1 x 4-pin captive screw connector | 1 x IEC cable |
| 1 x 5-pin captive screw connector | 1 x Installation Guide |



IMPORTANT: Visit <https://atlona.com/product/AT-AVA-EX100CE-BP-KIT> for the latest firmware updates and Installation Guide.



Panel Descriptions



1 LAN

Connect an Ethernet cable from this port to a Local Area Network (LAN) or source for pass through.

2 TEST

Quick and easy test for category cables. Use the button to start the test and the LED to determine pass or fail.

3 FW

Connect a micro-USB to USB-A type cable from this port to a computer, to update the firmware.

4 POWER and LINK LEDs

The power LED will illuminate green when receiving power. The link LED will glow yellow when signal is being sent/received between the transmitter and the receiver.

5 DC 48V *Optional*

Connect the included power supply to either this port or the power port on the receiver.

6 RS-232

Bidirectional control port, used for pass through of commands to or from the receiver.

7 IR IN/OUT

Connect a 3rd party controller to the IR IN port or an IR emitter to the IR OUT port.

8 HDBaseT OUT

Connect an HDBaseT cable from this port to the **HDBaseT IN** port on the receiver.

9 HDMI IN

Connect an HDMI cable from a source to this port. e.g. HDR BluRay Player

10 LAN

Connect an Ethernet cable from this port to a Local Area Network (LAN) or display for pass through.

11 FW

Not used at this time.

12 POWER and LINK LEDs

The power LED will illuminate green when receiving power. The link LED will glow yellow when signal is being sent/received between the transmitter and the receiver.

13 DC 48V *Optional*

Connect the included power supply to either this port or the power port on the transmitter.

14 RS-232

Bidirectional control port, used for pass through of commands to or from the transmitter.

15 IR IN/OUT

Connect an IR receiver to the IR IN port or an IR emitter to the IR OUT port.

16 HDBaseT IN


Connect an HDBaseT cable from this port to the **HDBaseT OUT** port on the transmitter.

17 HDMI OUT

Connect an HDMI cable from this port to an HDMI display.



HDBaseT LED Descriptions

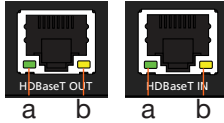

a Green LED


When a category cable is connected and receiving signal this LED will be illuminated. If no cable or signal is being received, the LED will be off.

b Yellow LED

This LED displays the status of the HDBaseT firmware. When the LED is blinking slowly, the firmware is good. If the LED is blinking rapidly or off, there is no firmware or the firmware has been corrupted.

RS-232


A 3-pin captive screw connector for RS-232 has been included.

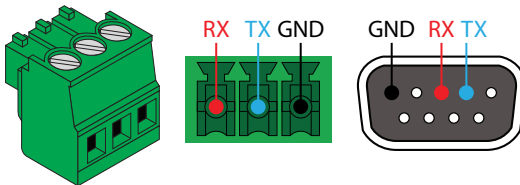

Pin out will be determined by the RS-232 cable and connect as RX (receive), TX (transmit) and \perp (Ground).


IR

Two captive screw connectors for IR have been included. A 4-pin connector for the transmitter and a 3-pin connector for the receiver.

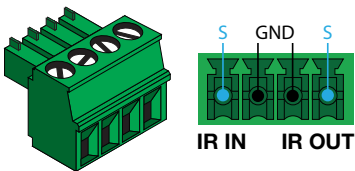

IR IN is connected by a ground and signal wire. Use with 3rd party control systems. For easy termination, Atlona recommends using the 2 meter IR cable AT-LC-CS-IR-2M (purchasable through atlonac.com).

IR OUT is connected by a ground and signal wire. Use the included IR emitter with this port.

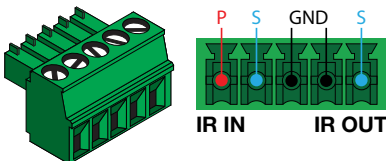


IR IN is connected by a power, ground, and signal wire. Use a 12V IR receiver with it (e.g. AT-IR-CS-RX purchasable through atlonac.com).

IR OUT is connected by a ground and signal wire. Use the included IR emitter with this port.




Power

A 2-pin captive screw connector for the power supply has been included.

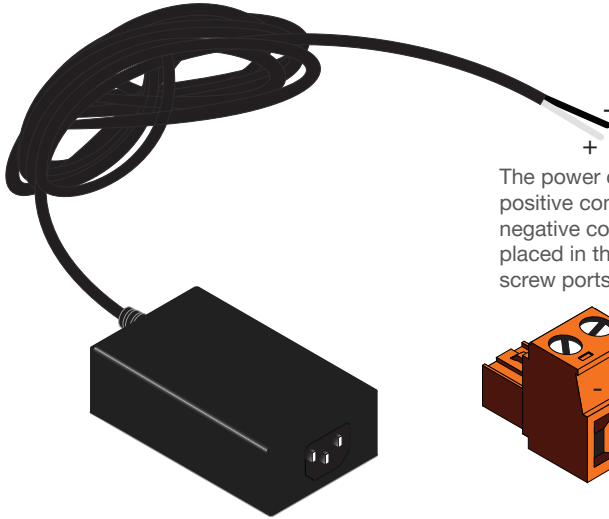

The power cable will be white for the positive connection and black for the negative connection. These should be placed in the corresponding captive screw ports.

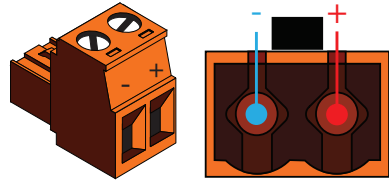

Mounting Instructions

The AT-AVA-EX100CE-BP-KIT includes two mounting brackets and four mounting screws each, which can be used to attach the units to any flat surface.

1. Position one of the mounting brackets, as shown below, aligning the holes on the side of the enclosure with one set of holes on the mounting bracket.
2. Use the enclosure screws to secure the mounting bracket to the enclosure.
3. Repeat the above steps to attach the second mounting bracket to the opposite side of the unit.





4. Mount the unit using the oval-shaped holes, on each mounting bracket. If using a drywall surface, a #6 drywall screw is recommended.



NOTE: Mounting brackets can also be inverted to mount the unit under a table or other flat surface.



Installation

1. Connect a source to the **HDMI IN** port on the transmitter.
2. Connect a display to the **HDMI OUT** port on the receiver.
3. Connect an HDBaseT cable, from the **HDBaseT OUT** port on the transmitter, to the **HDBaseT IN** port on the receiver.
4. ***Optional*** Connect a 3rd party controller to the transmitter using either the 3-pin RS-232 or the 2-pin IR IN ports.
5. ***Optional*** Connect an IR receiver to the IR IN port of the receiver.
6. ***Optional*** Connect an IR emitter to the IR OUT port of the transmitter or receiver.
7. ***Optional*** Connect a network switch (if the receiver is not connected) or source to the LAN port of the transmitter, for IP control, system configuration, or Ethernet routing.
8. ***Optional*** Connect a network switch (if the transmitter is not connected) or display to the LAN port of the receiver, for IP control, system configuration, or Ethernet routing.
9. Connect the included 48V power supply into the transmitter or receiver.
10. Connect power supply to an AC outlet.



Cable Recommendation Guidelines

Refer to the tables below for recommended cabling when using Altona products with HDBaseT. The green bars indicate the signal quality when using each type of cable. Higher-quality signals are represented by more bars.

Core	Shielding	CAT5e	CAT6	CAT6a	CAT7
Solid	UTP (unshielded)	■	■■■	■■■■■	N/A
	STP (shielded)	■■■	■■■■■	■■■■■■■	■■■■■■■
Performance Rating (MHz)		350	500	600	800



IMPORTANT: It is recommended to use UTP6A (<https://atlon.com/product/utp6a/>) and STP6X (<https://atlon.com/product/stp6x/>) if a stranded/patch cable is needed. These cables have been tested and approved to work with these extenders for full functionality.

Cable*	Max. Distance @ 4K	Max. Distance @ 1080p
CAT5e	295 feet (90 meters)	330 feet (100 meters)
CAT6/6a/7	330 feet (100 meters)	330 feet (100 meters)

*Altona recommends TIA/EIA 568-B termination for optimal performance.

TEST

The transmitter has the ability to test the HDBaseT cable quality through the front panel. Press the test button on the front panel of the transmitter to start the test, the LED will display the testing results.



Button:

- Blue Blinking: The test is running properly and the button will blink 10 times during the testing process.
- Red Light: There is no signal for the test to check.

LED:

- No Light: There is no HDBaseT cable plugged in.
- Blinking: There is no HDBaseT signal coming through.
- Solid Green: The HDBaseT cable is good.
- Solid Yellow: One or two HDBaseT pairs are not working, reterminate the cable.
- Solid Red: Multiple pairs are not working. Reterminate the cable and if the LED turns yellow or red again, replace the cable.



Updating Firmware

1. Download the firmware .zip file from the firmware tab located at <https://atlonacom/product/AT-AVA-EX100CE-BP-KIT>.
2. Unzip the .bin file to an easy to locate area of the local PC.
3. Connect the transmitter's FW micro USB port to a PC using a micro USB to USB A cable (purchased separately).
4. The PC should automatically detect the unit and display the autorun options. Select the view files in folder option. A new window will open.
5. If there are any files inside the folder, delete them, otherwise drag and drop the .bin file into the folder. While the firmware loads to the unit, the green power LED on the front panel will flash. This process can take up to 5 minutes to complete.
6. Once the green LED goes solid, disconnect the unit from the PC. The firmware update is finished.



NOTE: Only the transmitter will be used for updating firmware. The receiver will be updated once it has been connected to the transmitter if it is not connected at the time of the firmware update.



Warranty

To view the product warranty, use the following link or QR code:

<https://atlona.com/warranty/>.



Version 3

English Declaration of Conformity

The English version can be found under the resources tab at:

<https://atlona.com/product/at-ava-ex100ce-bp-kit/>.



Chinese Declaration of Conformity 中国RoHS合格声明

由SKU列出於:

<https://atlona.com/about-us/china-rohs/>.



atlona.com • Toll free US 877.536.3976 • International 41.43.508.4321

25144-R3